

TauRIS RACE ENTRY PROCEDURES

1. Connect clock to PC.
2. Connect Power.
3. Start 2 Entry.
4. Enter Club –ID: 001#.
5. Enter Flight-ID: 001#, or 002#, or 003# for later races.
6. Press # for Set Clock Confirm:
7. Press # for No Radio Clock:
8. Enter dd: mm: hh: mm: ss
If dd:mm:hh is correct, press # and now enter minutes and seconds, then press # when sequenced to Master Clock.
9. Disconnect power to clock.
10. Connect to entry sensor.
11. Enter your race birds over club entry pad.
12. Disconnect power, disconnect clock and plug clock back to computer 15 pin cable. Connect power or start clock.
13. Print 2 entries (1 for Race Secretary; 1 for flyer).
14. Press 3 Entry Finish.
15. Press # to Activate Clock.

Now, you can enter race birds for 2nd race, 3rd race, etc.

SET CLOCK IN RACE TIMER MODE

1. Connect 9 or 15 pin to clock from sensor quad pad or single pads.
2. Connect Power to clock.
3. Wait, clock will automatically set itself in Race Mode.
4. If you cannot wait, press Start (3) Register. Clock will indicate # of sensors connected to the clock.
5. After finished clocking birds, disconnect power, and take clock to the club.

RESULTS

1. Connect clock to computer, connect power.
2. Press Start 4 Results.
3. Enter Club 001#.
4. Enter Flight 001#, 002#, 003#, etc.
5. Press # for Clock Control.
6. Press # for No Radio Clock.
7. Enter “Knock off time” in clock ahead of time you will confirm to “Master Clock”. Wait until time you have entered equals Master Clock, press # at the exact second.
8. On TauRIS Club Software, select Extras and print results, press # of clock, print 2 copies (1 for Race Secretary; 1 for flyer).
9. If sending results to Winspeed electronically, press 8 on clock to set clock in communication mode.
10. On TauRIS Club Software, select communication, get race data
11. Enter Club ID: 0001; Flight ID: 0001; Calendar Week and Date
12. Press Get Data. You should see Race Data ready for the loft # of the flyer along with the Loft name of the flyer.
13. Press (3) to finish and release the race in the clock.
14. Press # to delete the flight.
15. Enter Codeword such as 1 2 3 4 and # to release the race.
16. Now, you can get the results for race 002 by entering Club 001#, Flight 002#.
17. Print 2 copies.
18. Get Race Data, by setting clock in Communication mode, Press 8.
19. On TauRIS Software, select Communication, Get Race Data. Enter Club ID, Flight ID, Calendar Week and Date. Race Data should appear.
20. Press (3) to finish and release the race in the clock.
21. Press # to delete the flight.
22. Enter Codeword such as 1 2 3 4 and # to release the race.
23. Clock is now cleared for next weeks race, unless there is another race in the clock such as 003#.

HOW TO GET RACE DATA INTO WINSPEED

1. Set up races as usual by adding a race under Race Data.
2. Select Clocks, TauRIS.
3. Select C:\BT97\Daten.
4. Highlight appropriate week and data of races in the clock
5. Press Next.
6. Choose Real Names or Loft Names.
7. Choose previously transferred birds from Winspeed or from your clock.
8. Press Next.
9. Match Clock Races with Winspeed Races.
01 – Junction, TX 1
02 – Junction, TX2
03 – Junction, TX3
10. Press Next.
11. Limit Bird – Yes or No.
12. If no, Select Finish. If Yes, tab and limit each loft.
13. Press Finish.
14. Select Yes to overwrite previously stored clockings.
15. Click OK for Clocking Data successfully transferred.
16. Now enter Wind Up Clocks and any clock deviations.
17. Print Race Reports.